

Touch panel driver2 for Mac OS

2016 Ver. 1.3.2.0

[Software name] Touch panel driver2

[System requirements]

Mac OS X 10.11 / Mac OS 10.12

※ This software is not available in the Classic Environment.

[Introduction of software]

This software is designed to be connected with the SHARP touch display to enable touch panel operation via Mac OS.

[Requirement of use]

This touch panel driver is only compatible with the following SHARP touch displays.

- SHARP LL-P202V / LL-S242A

* Touch drivers will not work properly if used with other Sharp touch displays.

[Note]

- After installation is complete, an alert message of “Kernel extension is not from an identified developer” may be displayed. In that case, select [OK] to continue.
- Performing touch gestures when holding digitizer pen may cause intermittent touch response from touch display.
- If a delay is noted when drawing a line or object onscreen, please use the following settings for improvement.

[1] Click “System Preferences” from the Apple menu.

[2] Click “SharpTouchDisplay2”, and select “Properties”.

[3] Click “Secondary click” tab.

[4] Un-check “Enable press and hold for secondary click”, or shorten “Press and hold effective range”.

[Restrictions]

- The SHARP touch display and 1 additional display is the current max allowed to be connected with a Mac computer. Both displays can be used simultaneously.
- “Ink” located under System Preferences is not available with this touch panel driver.
- The following touch gestures listed below in [1] thru [4] may switch off other touch gestures functions. Suggestions are provided to use switched off touch gestures.

[1] When the checkbox for “Spread with thumb and three fingers (show desktop)” is set to ‘off’, you cannot use the touch gesture function to (close Launchpad).

To (close Launchpad), you can tap any area of the screen besides the icon.

[2] When the checkbox for “Pinch with thumb and three fingers (open Launchpad)” is set to ‘off’, you cannot use the touch gesture function to (close the desktop).

To (close the desktop), you can tap the transparent area in the edge of the screen.

[3] When the checkbox for “Swipe down with three or four fingers (display App Exposé)” is set to ‘off’, you cannot use the touch gesture function to (close Mission Control).

To (close Mission Control), you can use the “swipe up with three or four fingers” touch gesture again, or you can tap the screen.

* Mac OS 10.12 is not supported.

[4] When the checkbox for “Swipe up with three or four fingers (display Mission Control)” is set to ‘off’, you cannot use the touch gesture function to (close App Exposé).

To (close App Exposé), you can use the “swipe down with three or four fingers” touch gesture again, or you can tap the screen.

* Mac OS 10.12 is not supported.

- In order to wake up from the sleep mode with tap operation on the touch display, tap the screen several times.

- Double-click range setting menu is disabled on Mac OS 10.12.

=====

* Apple, Mac, Mac OS are trademarks of Apple Inc, which are registered in United States and other countries.

* Other company names and product names are trademarks or registered trademarks of respective companies which are registered in each country.